

Datasheet - Metric

ITAS INTENSITYFLAME BURNERS

MODEL IF0115-GAS

Parameter	Value
Maximum Capacity input [kWlhv]	11500
(Air pre-heating limits the maximum capacity)	
Minimum Capacity input [kWlhv]	800
Fuels	Natural gas, propane, butane, mixed gases
(Contact Fives ITAS S.p.A. for dual gas or oil options)	(Contact Fives ITAS S.p.A. for using special gsses)
Pressure drop gas gun [mbar]	Natural gas: 58,2
(maximum capacity)	Propane: 23,4
Nominal combustion Air Inlet [Nm³/h]	13800
Air inlet pressure [mbar]	23,7
(At nominal input, 20°C)	
Lambda [-]	1,2 to 1,7
Combustion air temperature [°C]	Standard <20
	On request <300
Fuel guns	Single - Gun for single gas
	Double - Gun for dual gas
Combustor options	Alloy (AISI 310)
	Refractory (83% alumina air bond)
Maximum chamber temperature [°C]	Alloy combustor: 600 (@ Lambda 1,4)
	Refractory combustor: 900
Flame dimensions [mm]	Length 3700
(Measured from outlet of combustor)	Diameter 1200
Ignition	Raw gas pilot, natural gas or propane
Pilot	Capacity [kW]: 115
	Gas pressure NG [mbar]: 30
	Gas pressure Propane [mbar]: 12,5
Flame Monitoring	UV scanner or Infrared scanner
Emissions	On request
Mounting position	Horizontal
	Vertical up
	Vertical down (use a continuous fan operation)
Weight [kg]	Burner with alloy combustor: 390
	Burner with refractory: 770

Notes:


- All data are based on net calorific values = lhv
- All information is based on common practice for gas and air pipe design.
 If support is needed please contact Fives ITAS S.p.A.
- All inputs are based on laboratory testing at neutral chamber conditions
- Natural gas: lhv = 9,97 kWh/Nm³; d=0,56
- Propane: lhv 26,3 kWh/Nm³; d=1,58

1/4

The information provided on this brochure is for information purposes only and does not constitute any legal obligation or a warranty, expressed or implied, concerning quality, marketability or suitability for a specific purpose.




1. OPERATION CURVE (AMBIENT COMBUSTION AIR)

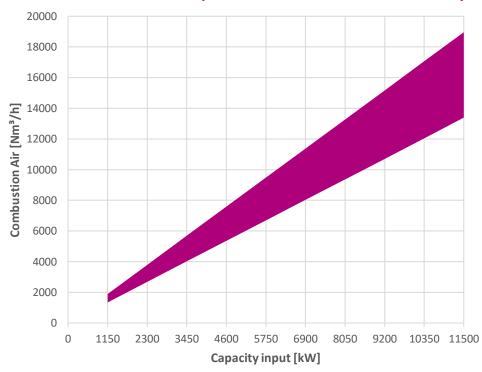

2. COMBUSTION AIR PRESSURE DROP

Pressure drop should be taken between the chamber and windbox pressure tap (tap B)

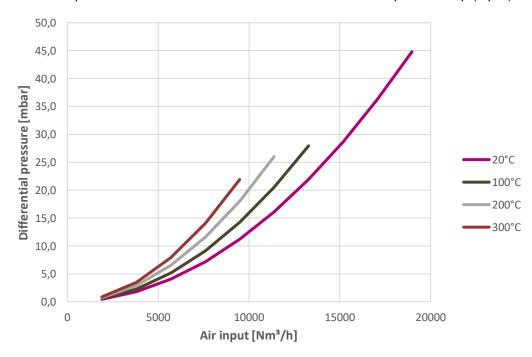


The information provided on this brochure is for information purposes only and does not constitute any legal obligation or a warranty, expressed or implied, concerning quality, marketability or suitability for a specific purpose.

2/4



3. GAS GUN PRESSURE DROP

Pressure drop should be taken as differential between the chamber and gas gun pressure tap A.

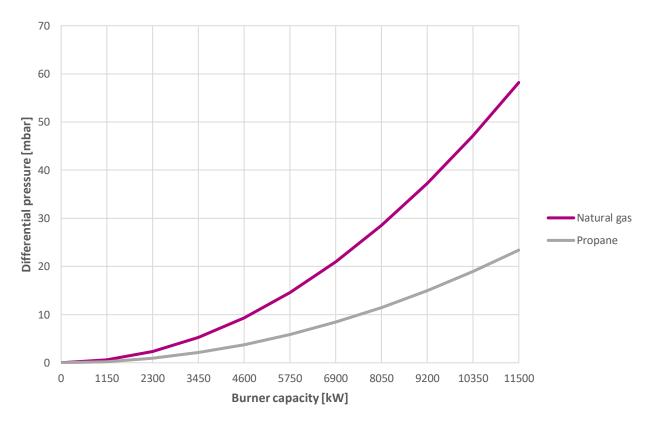


Note: Pressure drop curves should be used as a guide for setting up burner. It is recommended to use fuel flow measurements for determining actual fuel flows.


3/4

The information provided on this brochure is for information purposes only and does not constitute any legal obligation or a warranty, expressed or implied, concerning quality, marketability or suitability for a specific purpose.



4. DIMENSIONS

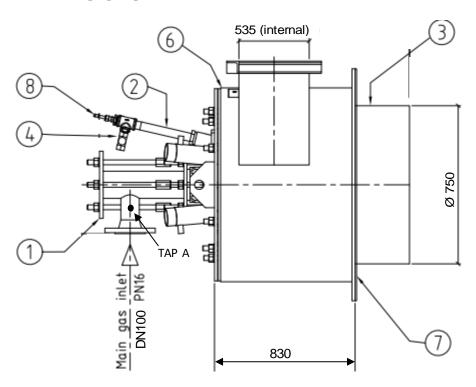

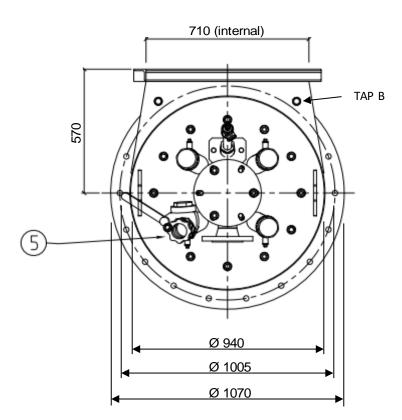

Description
Gas gun
Pilot burner
Combustor (refractory/alloy)
Pilot gas adjusting tee
Sight glass with valve
Burner body
Burner gasket
Ignition spark rod

4/4

The information provided on this brochure is for information purposes only and does not constitute any legal obligation or a warranty, expressed or implied, concerning quality, marketability or suitability for a specific purpose.