

Datasheet - Metric

ITAS INTENSITYFLAME BURNERS

MODEL IF0145-GAS

Parameter	Value
Maximum Capacity input [kWlhv]	14500
(Air pre-heating limits the maximum capacity)	
Minimum Capacity input [kWlhv]	1100
Fuels	Natural gas, propane, butane, mixed gases
(Contact Fives ITAS S.p.A. for dual gas or oil options)	(Contact Fives ITAS S.p.A. for using special gases)
Pressure drop gas gun [mbar]	Natural gas: 103,3
(maximum capacity)	Propane: 41,6
Nominal combustion Air Inlet [Nm ³ /h]	17 400
Air inlet pressure [mbar]	22
(At nominal input, 20°C)	
Lambda [-]	1,2 to 1,7
Combustion air temperature [°C]	Standard <20
	On request <300
Fuel guns	Single - Gun for single gas
	Double - Gun for dual gas
Combustor options	Alloy (AISI 310)
	Refractory (83% alumina air bond)
Maximum chamber temperature [°C]	Alloy combustor: 600 (@ Lambda 1,4)
	Refractory combustor: 900
Flame dimensions [mm]	Length 4000
(Measured from outlet of combustor)	Diameter 1300
Ignition	Raw gas pilot, natural gas or propane
Pilot	Capacity [kW]: 145
	Gas pressure NG [mbar]: 30
	Gas pressure Propane [mbar]: 12,5
Flame Monitoring	UV scanner or Infrared scanner
Emissions	On request
Mounting position	Horizontal
	Vertical up
	Vertical down (use a continuous fan operation)
Weight [kg]	Burner with alloy combustor: 470
	Burner with refractory: 970


Notes:

- All data are based on net calorific values = Ihv
- All information is based on common practice for gas and air pipe design. If support is needed please contact Fives ITAS S.p.A.
- All inputs are based on laboratory testing at neutral chamber conditions
- Natural gas: lhv = 9,97 kWh/Nm³; d=0,56
- Propane: lhv 26,3 kWh/Nm³; d=1,58

The information provided on this brochure is for information purposes only and does not constitute any legal obligation or a warranty, expressed or implied, concerning quality, marketability or suitability for a specific purpose.


1/4



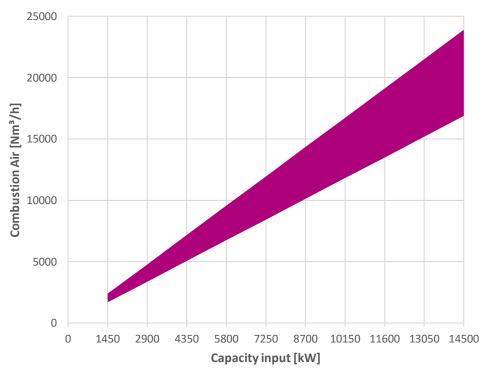

1. OPERATION CURVE (AMBIENT COMBUSTION AIR)

2. COMBUSTION AIR PRESSURE DROP

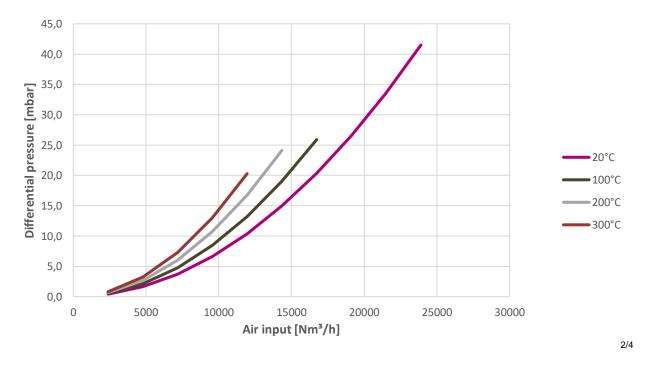


Pressure drop should be taken between the chamber and windbox pressure tap (tap B)

The information provided on this brochure is for information purposes only and does not constitute any legal obligation or a warranty, expressed or implied, concerning quality, marketability or suitability for a specific purpose.



3. GAS GUN PRESSURE DROP

Pressure drop should be taken as differential between the chamber and gas gun pressure tap A.

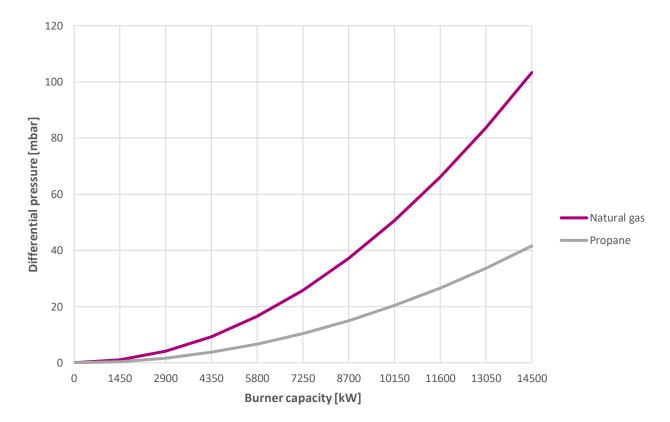


Note: Pressure drop curves should be used as a guide for setting up burner. It is recommended to use fuel flow measurements for determining actual fuel flows.

3/4

The information provided on this brochure is for information purposes only and does not constitute any legal obligation or a warranty, expressed or implied, concerning quality, marketability or suitability for a specific purpose.



4. **DIMENSIONS**

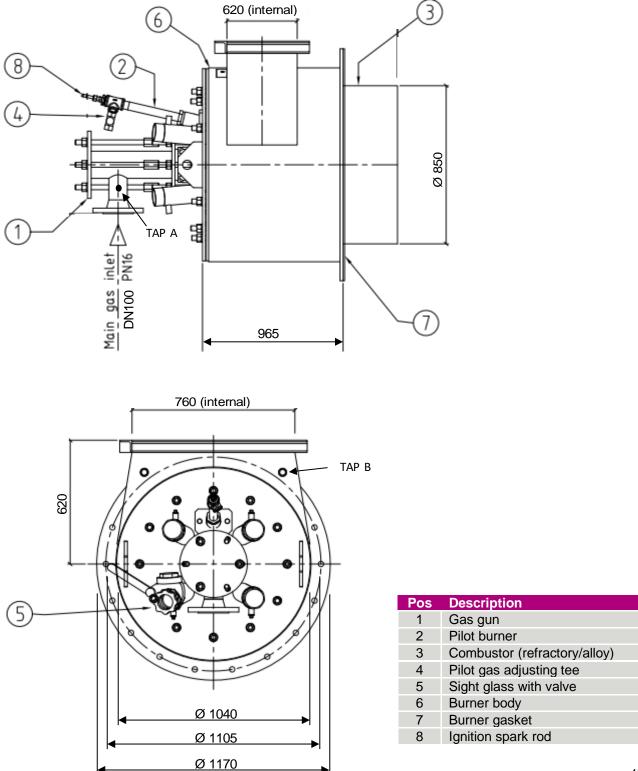

4/4

The information provided on this brochure is for information purposes only and does not constitute any legal obligation or a warranty, expressed or implied, concerning quality, marketability or suitability for a specific purpose.